


STANDARD EQUIPMENT		QTY
<b>A</b>	AP4.0—Application Processor	1
<b>B</b>	PS-AP50W-12V—AP4.0 Power Supply/ Cable	1
<b>C</b>	Touch Screen Display	1
<b>D</b>	Touch Screen Cables—One CV-1 DP++ cable, One USB cable (BOTH REQUIRED)	1
<b>E</b>	LE-R-50—Lynx 50" Stroke/Velocity Encoder	1
<b>F</b>	CE-LX5-4M-F90—Lynx Four-Meter 90° Cable	1 <sup>3</sup>
<b>G</b>	CE-LX5-2M—Lynx Two-Meter Cable	1 <sup>2</sup>
<b>H</b>	CE-LX5-4M—Lynx Four-Meter Cable	1 <sup>3</sup>
<b>I</b>	J-LX1—Lynx Single Feed-Through	1
<b>J</b>	ID7-M-SEQ—Lynx Sequence Module	1
<b>K</b>	C-ID7-M-3M—Shielded Cable for ID7-M-SEQ	1 <sup>1</sup>
<b>L</b>	OR2-M—Lynx Relay Module OR OA1-M-V—Lynx Analog Output Module	1 <sup>5</sup>
<b>M</b>	C-OR2-M-3M—Shielded Cables for OR2-M	2 <sup>1,5</sup>
<b>N</b>	IA1-M-V—Lynx Analog Input Module	1
<b>O</b>	C-IA1-M-3M—Shielded Cable for IA1-M-V	1 <sup>1</sup>
<b>P</b>	J-LX5—Lynx Five-Port Junction Box	1
OPTIONAL EQUIPMENT		QTY
<b>U</b>	L-PX—Lynx Proximity Switch	1 <sup>1,4</sup>

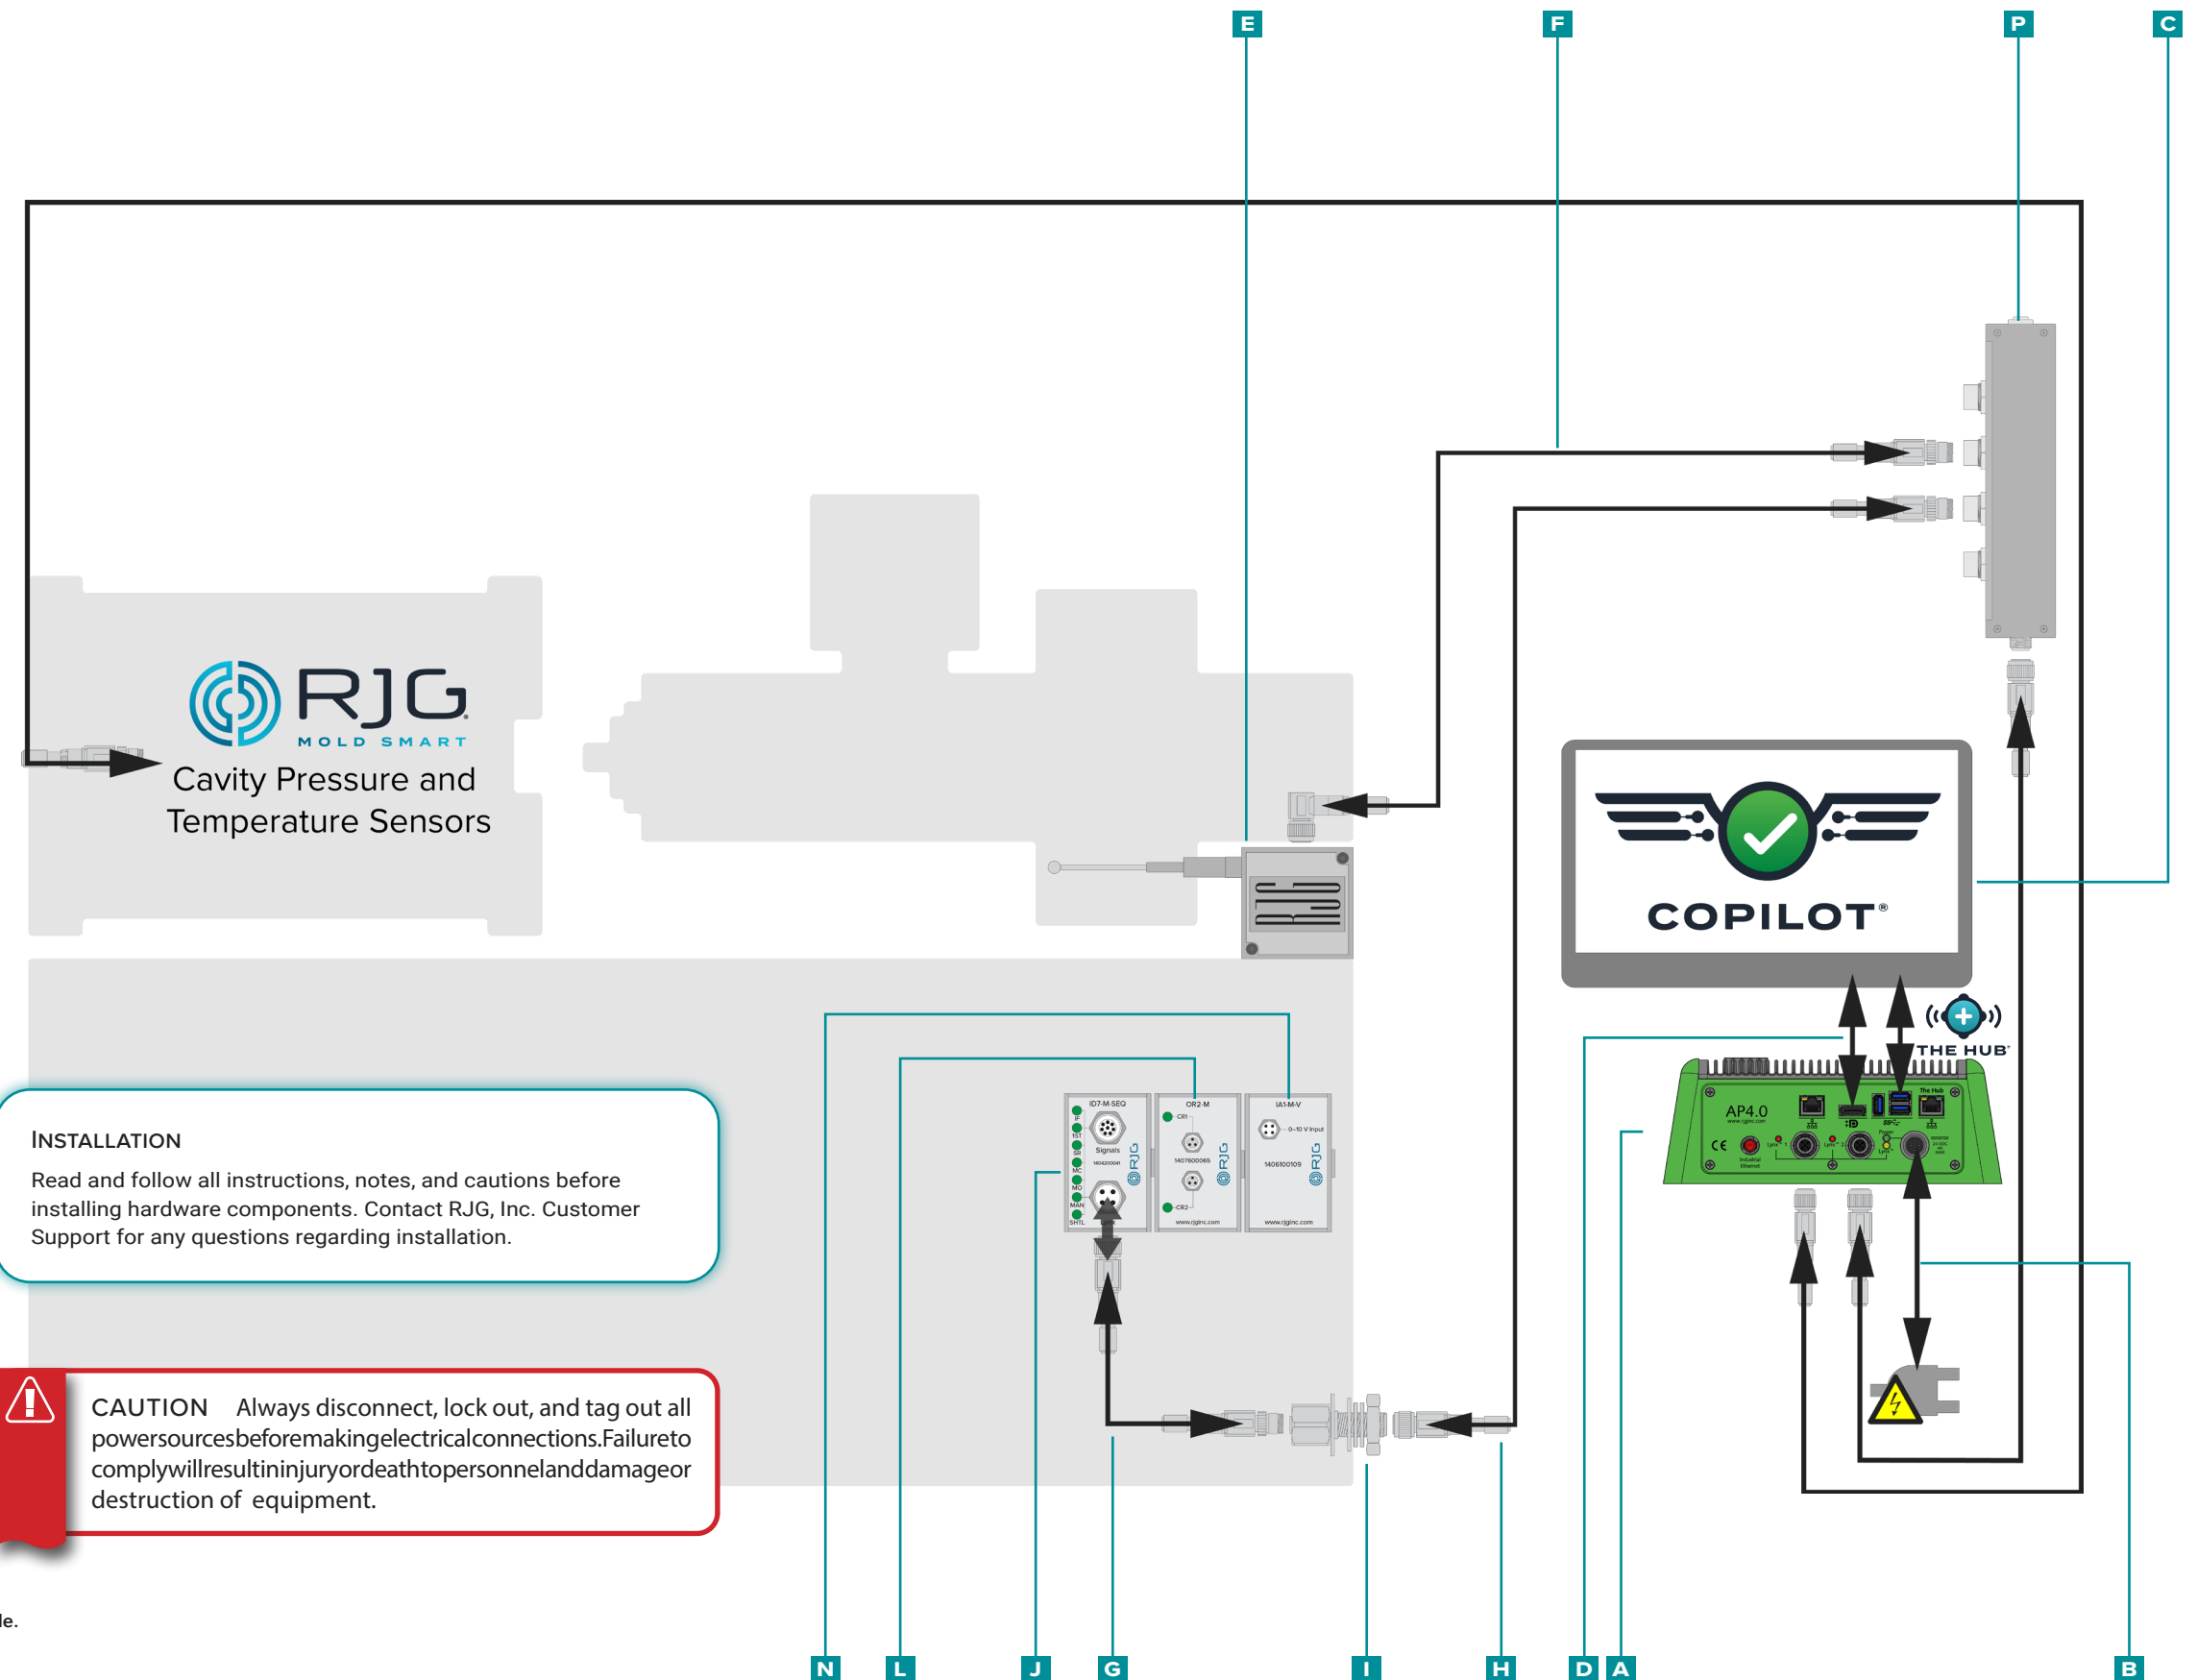

<sup>1</sup> Item not shown.  
<sup>2</sup> For standard installation; use of L-PX requires a quantity of 3.  
<sup>3</sup> For standard installation; use of L-PX requires a quantity of 2.  
<sup>4</sup> Only used if mold closed signal is not available from the ID7-M-SEQ sequence module.  
<sup>5</sup> OA1-M-V used for control (V→P) if OR2-M cannot be utilized.

STANDARD EQUIPMENT		QTY
<b>A</b>	AP4.0—Application Processor	1
<b>B</b>	PS-AP50W-12V—AP4.0 Power Supply/Cable	1
<b>C</b>	Touch Screen Display	1
<b>D</b>	Touch Screen Cables—One CV-1 DP++ cable, One USB cable (BOTH REQUIRED)	2
<b>E</b>	LE-R-50—Lynx 50" Stroke/Velocity Encoder	1
<b>F</b>	CE-LX5-4M-F90—Lynx Four-Meter 90° Cable	1 <sup>3</sup>
<b>G</b>	CE-LX5-2M—Lynx Two-Meter Cable	1 <sup>2</sup>
<b>H</b>	CE-LX5-4M—Lynx Four-Meter Cable	1 <sup>3</sup>
<b>I</b>	J-LX1—Lynx Single Feed-Through	1
<b>J</b>	ID7-M-SEQ—Lynx Sequence Module	1
<b>K</b>	C-ID7-M-3M—Shielded Cable for ID7-M-SEQ	1 <sup>1</sup>
<b>L</b>	OR2-M—Lynx Relay Module OR OA1-M-V—Lynx Analog Output Module	1 <sup>5</sup>
<b>M</b>	C-OR2-M-3M—Shielded Cables for OR2-M	2 <sup>1,5</sup>
<b>N</b>	LS-H-1/4NPT-3K—Lynx 3,000 lb. Hydraulic Pressure Sensor	1
<b>O</b>	CE-LX5-2M—Lynx Two-Meter Cable	1
<b>P</b>	J-LX5—Lynx Five-Port Junction Box	1
OPTIONAL EQUIPMENT		QTY
<b>U</b>	L-PX—Lynx Proximity Switch	1 <sup>1,4</sup>

<sup>1</sup> Item not shown.  
<sup>2</sup> For standard installation; use of L-PX requires a quantity of 3.  
<sup>3</sup> For standard installation; use of L-PX requires a quantity of 2.  
<sup>4</sup> Only used if mold closed signal is not available from the ID7-M-SEQ sequence module.  
<sup>5</sup> OA1-M-V used for control (V→P) if OR2-M cannot be utilized.

